 


**KIT VIDEOCITOFONICO MONO E BIFAMILIARE VIVA VOCE A COLORI**  
**ONE- AND TWO-HOUSEHOLD COLOUR HANDS-FREE VIDEO DOOR PHONE KIT**  
**KIT VIDÉO MONO ET BI-FAMILLE MAINS LIBRES COULEUR**  
**KIT VIDEOINTERFÓNICO MONO Y BIFAMILIAR A COLORES CON ALTA VOZ**  
**FARB-VIDEOSPRECHANLAGE-KIT FÜR EIN- UND ZWEIFAMILIENHAUS**  
**HANDENVRIJE EEN- EN TWEEGEZINS-KLEURENVIDEOKIT**


Sch./Ref. 1722/85 - 1722/86 (\*)

IP44

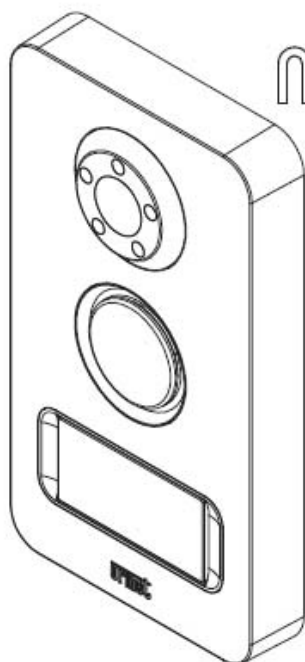

mikra

 
cxmodo

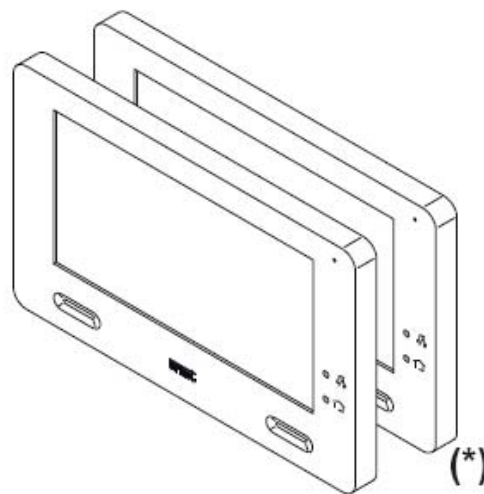

**GUIDA RAPIDA PER L'UTILIZZO DEL VIDEOCITOFONO**  
**VIDEO DOOR PHONE QUICK USER'S GUIDE**  
**GUIDE RAPIDE D'UTILISATION DU MONITEUR**  
**GUÍA RÁPIDA DE USO DEL VIDEOINTERFONO**  
**KURZANLEITUNG FÜR DIE VERWENDUNG DER VIDEOSPRECHANLAGE**  
**SNELGIDS VOOR HET GEBRUIK VAN DE VIDEO-DEURINTERCOM**

<b>ITALIANO</b>	<b>3</b>
<b>ENGLISH</b>	<b>7</b>
<b>FRANÇAIS</b>	<b>11</b>
<b>ESPAÑOL</b>	<b>15</b>
<b>DEUTSCH</b>	<b>19</b>
<b>VLAAMS</b>	<b>27</b>

 **DESCRIZIONE DEI COMPONENTI**  
**DESCRIPTION OF COMPONENTS**  
**DESCRIPTION DES COMPOSANTS**  
**DESCRIPCIÓN DE LOS COMPONENTES**  
**BESCHREIBUNG DER KOMPONENTEN**  
**OMSCHRIJVING VAN DE ONDERDELEN**

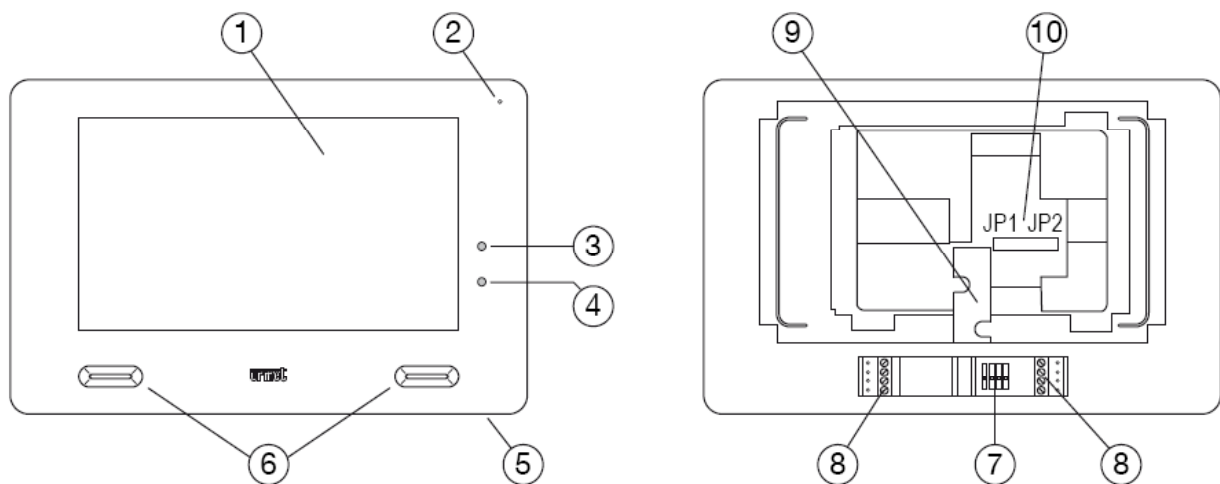


1. Display touchscreen 7" / 7" *touchscreen display* / Écran tactile 7" / *Pantalla táctil 7" / 7"-Touchscreen-Display / 7" aanraakscherm*
2. Microfono / *Microphone* / Micro / *Micrófono* / Mikrofon / *Microfoon*
3. Led rosso di segnalazione mute attivo / *Active Mute red indicator LED* / Voyant rouge de Silence actif / *Indicador rojo led mute activo* / Rote Stummschaltungs-LED aktiv / *Rood waarschuwinglampje mute-functie aan*
4. Led blu di conferma comando Yokis inviato / *Sent Yokis control confirmation blue LED* / Voyant bleu de confirmation commande Yokis envoyée / *Led azul de confirmación de mando Yokis enviado* / Blaue Bestätigungs-LED Yokis-Befehl gesendet / *Blauwe led bevestiging Yokis commando verzonden*
5. Pulsante ON/OFF / *ON/OFF button* / Bouton ON/OFF / *Botón ON/OFF* / Taste EIN/AUS / *AAN/UIT knop*
6. Altoparlanti / *Speakers* / Haut-parleurs / *Altavoces* / Lautsprecher / *Luidsprekers*
7. Dip-switch di configurazione / *Configuration dip-switch* / Commutateur de configuration / *Dip switch de configuración* / Konfigurations-Dip-Switch / *Configuratie dip-schakelaars*
8. Morsettiere di collegamento / *Connection terminal strips* / Bornier de branchement / *Terminales de conexión* / Anschlussklemmen / *Klemmenbord*
9. Passaggio per cavi / *Cable guide* / Passage des câbles / *Conductos de cables* / Durchlass für Kabel / *Passage voor kabels*
10. Ponticelli di configurazione / *Configuration jumpers* / Pontets de configuration / *Puentes de configuración* / Konfigurationsbrücken / *Configuratiejumpers*

### HOW TO TURN ON THE SCREEN AND ACCESS THE VARIOUS FUNCTIONS

 - Tap the screen at any point, or
- Press the button (5) at the bottom right of the screen to bring up the Home Page.

The Home Page is the following:

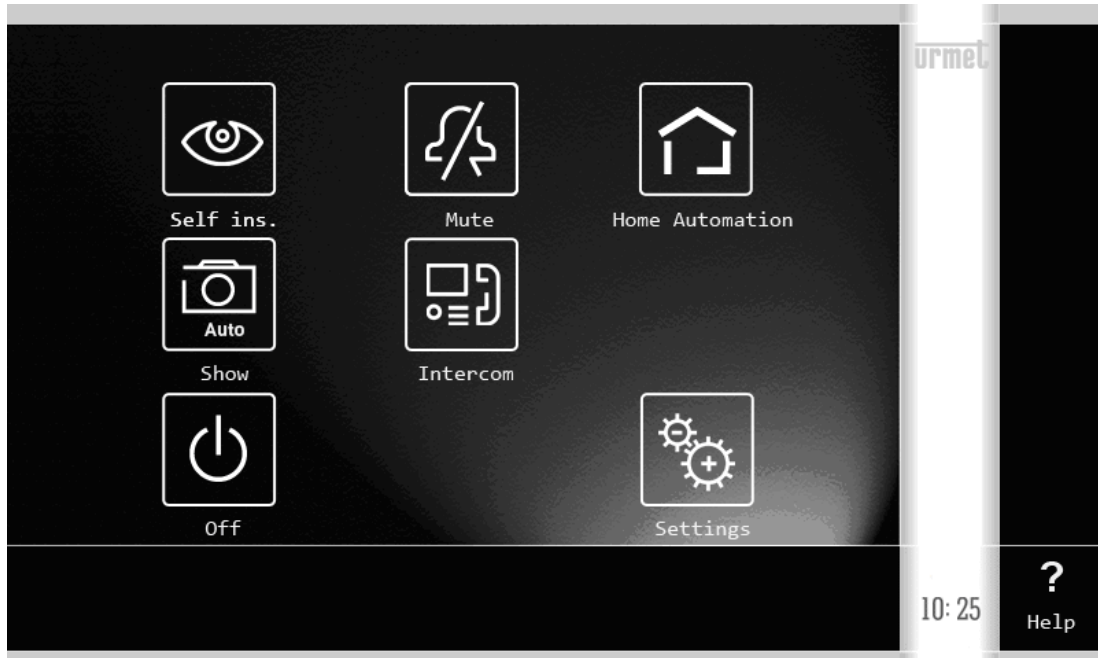

and gives access to the following functions:



View footage from the video camera.



Mute the call (Mute) to the monitor (the activation of this function is highlighted by the red indicator LED 3 lighting up and by the flashing of the Mute icon).



Access the Yokis Home Automation screen page.



View a snapshot from among those already saved to the photo gallery.



Make an intercom call to other users in the same apartment or between users in different apartments.



Turn off the screen.



Change monitor settings



Current time.

## 2.1 HOW TO TURN OFF THE SCREEN


To turn off the screen press the Monitor button (5) or wait for the timeout delay.

## 2.2 HOW TO ANSWER AN EXTERNAL CALL

When the CXModo Monitor receives an outdoor door phone video call, it rings and the screen lights up from its default switched-off state.




By tapping the various icons you can:


 Answer the call and begin a hands-free conversation; then, to end the call press the same icon once again, the screen will turn itself off.


 Open the door.


 Open a driveway or garage gate.

 Activate an auxiliary function, e.g. turning on the stair lights.


 Open a submenu where you can:


 Change the audio volume in the calling point-to-monitor direction, or the brightness, contrast, and colour of the display.

 Enlarge or shrink the image, also changing its format from 4:3 to 16:9.

 (Do not use: pre-setting for future functions.)

 Store a snapshot of the outdoor picture displayed on the screen.

 
 Turn the monitor microphone off and then back on, to prevent the caller hearing what you are saying. The icon will only be active after the call has been answered.

 Close the previous submenu.

## 2.3 HOW TO ACTIVATE A YOKIS CONTROL



From the Home Page press the button to access Yokis Home Automation:

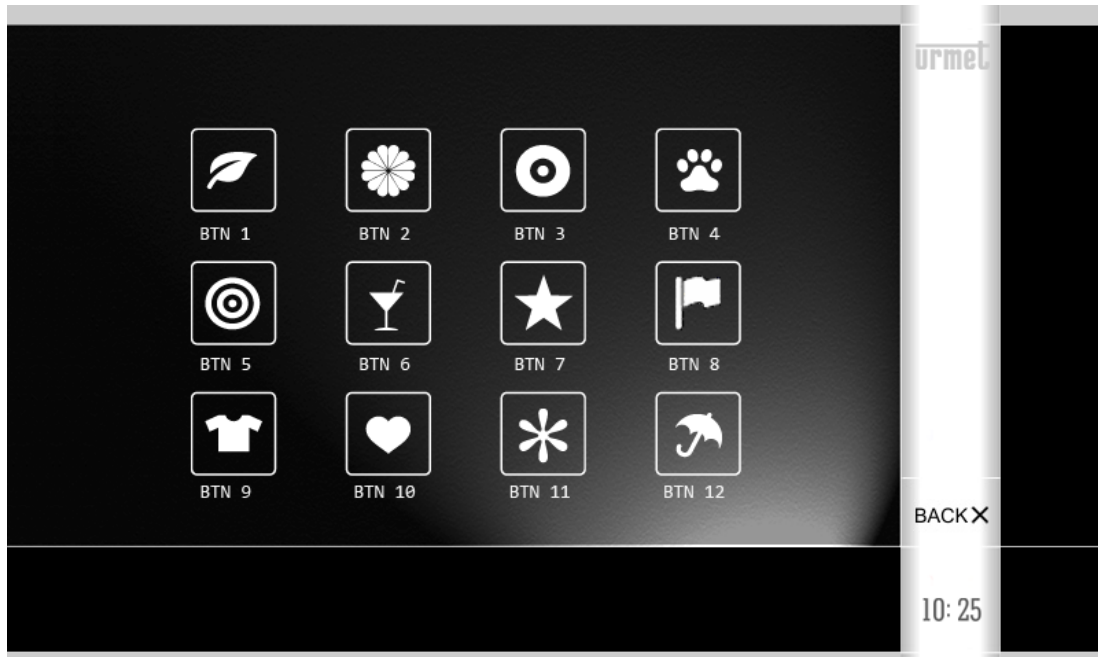


From here, select your required control(s).


To schedule a control for one or more weekly occurrences, from the Home Page of the monitor, press the icon



'Settings' and then select 'Yokis'. You will obtain access to the following page:

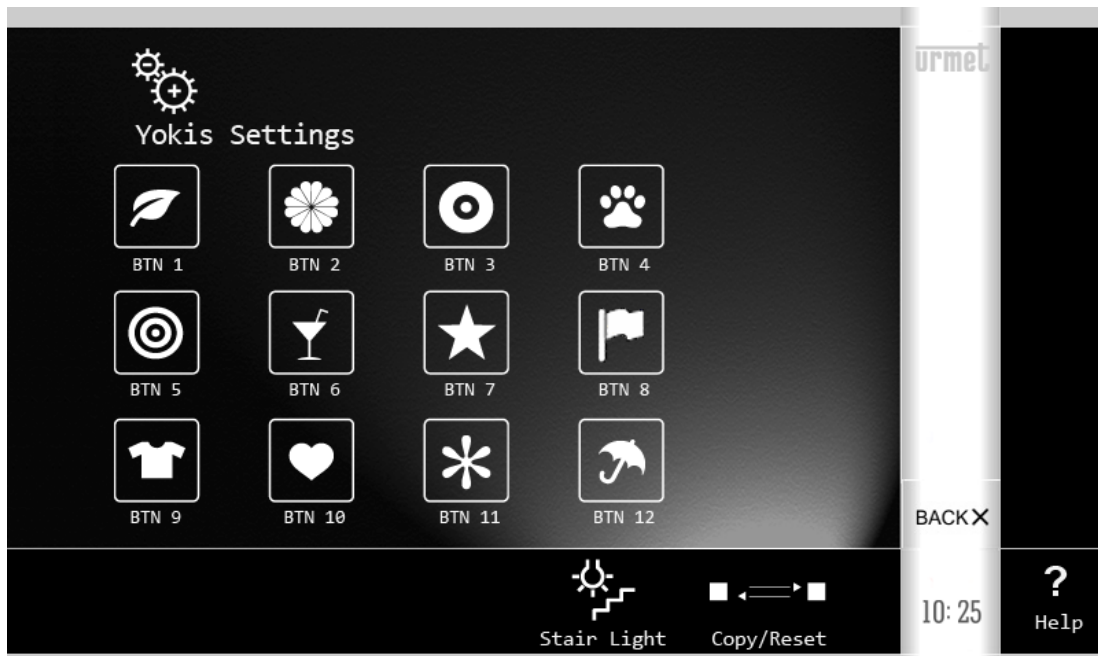


 Select the button that you wish to schedule, e.g. the first one. You will display:

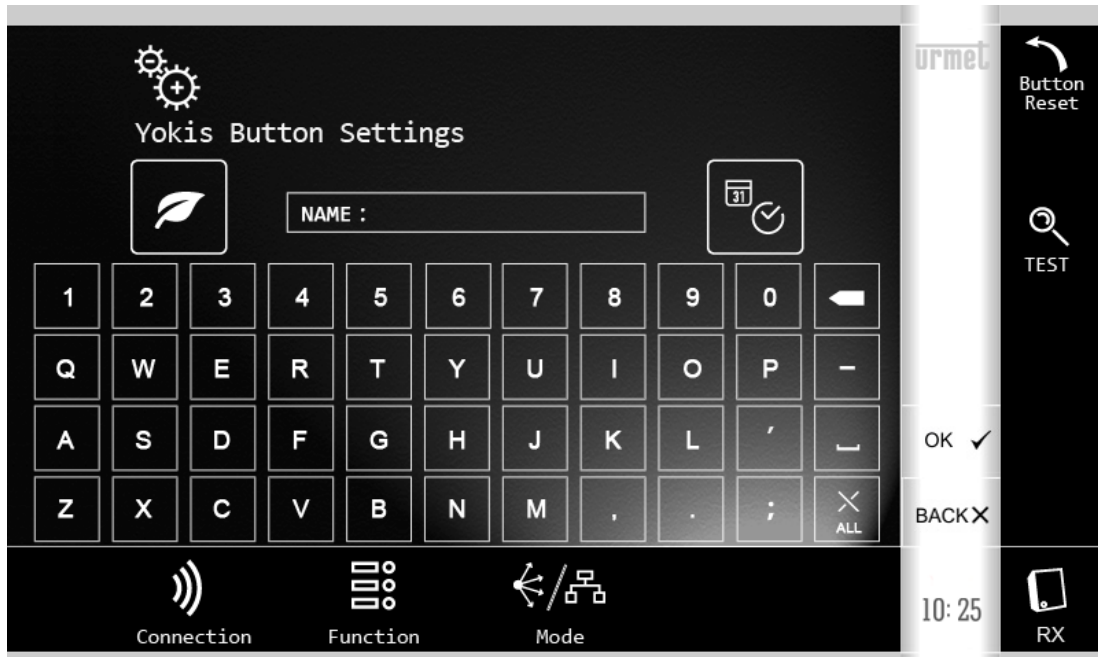

Tap the icon and select the scheduling time and days in the following screen:

**NOTE THAT** the scheduling only becomes active if the 'Enable' box is ticked, too.

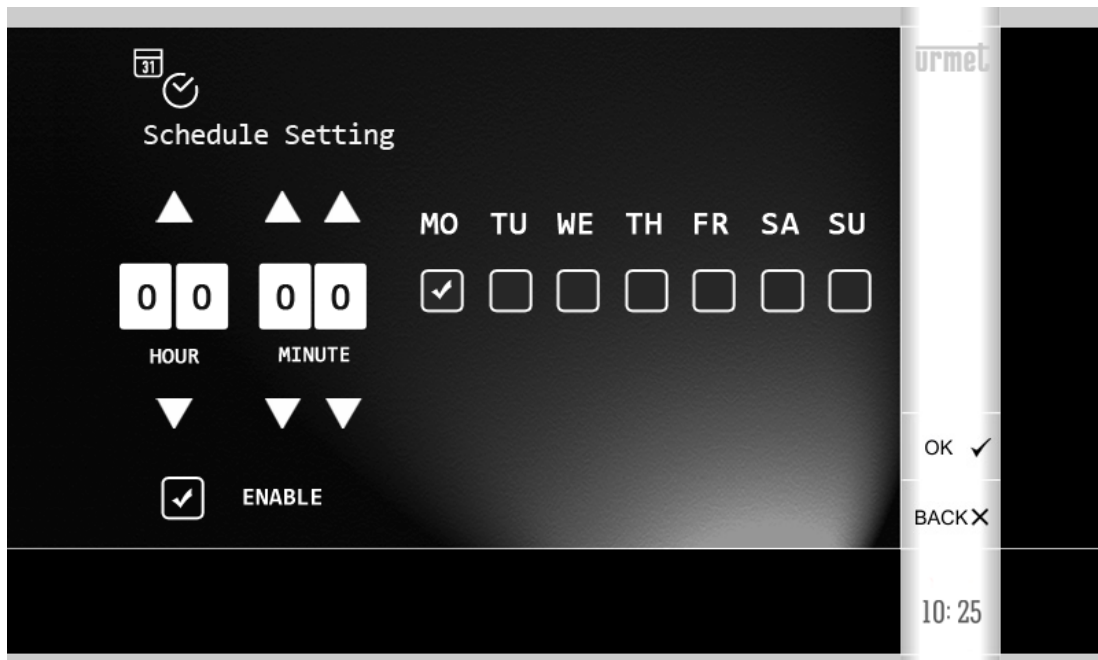

To return to the Home Page, press 'OK' twice to confirm the changes and then 'BACK' twice.

For more information scan the QR Code below with your smartphone or tablet:



**DS1722-080A**

URMET S.p.A.  
10154 TORINO (ITALY)  
VIA BOLOGNA 188/C  
Telef. +39 011.24.00.000 (RIC.AUT.)  
Fax +39 011.24.00.300 - 323

**urmet**

**LBT20132**

Area tecnica  
servizio clienti +39 011.23.39.810  
<http://www.urmet.com>  
e-mail: [info@urmet.com](mailto:info@urmet.com)